

## Disconnecting the USB cable

After completing the file transfer, you must disconnect the cable in the following way:

**1** Double-click on the green arrow in the taskbar on the bottom right of the window.



**2** When the [Stop a Hardware device] message appears, press the [OK] button and disconnect the USB cable.

 


k



## YP-T6 Quick Guide

### Location of Controls

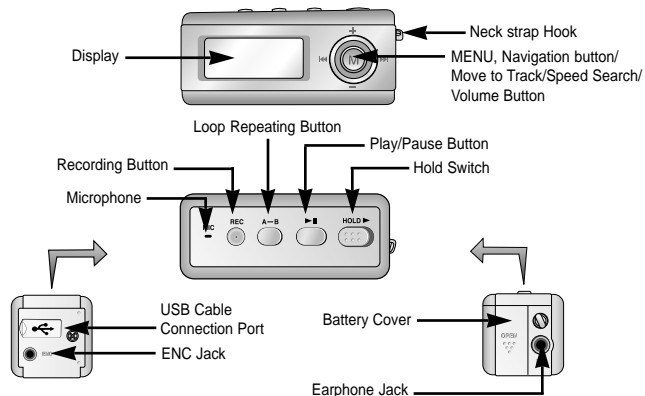

### Turning Power On and Off

- Power On : Press the ►|| button to turn on the power.
- Power Off : Press and hold the ►|| button to turn off the power.

### Playing Music

- Press the ►|| button.
- Playback starts.

### Pausing Music

 
 
Press the ►|| button to pause playback.

- If no buttons are pressed within 10 seconds(changes depending on settings), the yepp automatically powers off.
- While in Pause mode, briefly press ►|| again to resume playback.

## Connecting the USB cable


- ▶ Before connecting the player to PC, make sure to install USB driver. Insert the Installation CD into the CD-ROM drive and then click [Install USB Driver]. Complete the installation by the instructions in the order as they appear in the windows.

- 1 Connect the USB cable to the USB port on the computer.
- 2 Connect the other end of the USB cable to the USB cable connection port on the bottom of the player.
  - If you disconnect the USB cable from your PC while implementing a command or initializing during USB driver installation, your PC may not function correctly.
- 3 The USB driver is installed with a message saying that it is searching for a new device. You may not see the display screen during installation. Go to the device manager to check that installation has been successfully completed.
- 4 Upon installation of the USB driver "Samsung yepp YP-T6 USB Device" will appear in the [System Properties] → [Device Manager].

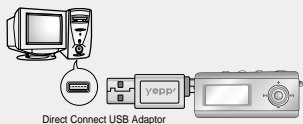

## Downloading/Uploading files

 - 1 Connect the player to your PC with the supplied USB cable.
- 2 Open Windows Explorer on PC.
  - Removable Disc is displayed in Windows Explorer.
- 3 Select the file to save and drag-and-drop it into the removable disk icon.  
(Files will appear In numerical, alphabetical order)
  - If you change the name of music files in Windows Explorer like 001\* \* \* , 002\* \* \* ..., music files will be played in the order of number indicated.

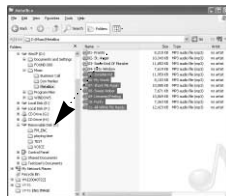

### Notice :

- The "WRITING/READING" message will appear during file download or upload. Disconnecting the USB cable while "WRITING/READING" is displayed may cause malfunction of the unit.
- Files will not necessarily play back in the order displayed in the Removable Disc in Windows Explorer.